



User Manual

INSTALLATION

Congratulations on your purchase of our product! We hope that RECOIL acoustics will delight you with impressive performance. In the production of our speakers, high-quality components and ultramodern materials are used. This manual contains the basic instructions required for the correct installation and use of the system. Before installing the components, please read all instructions in this manual carefully. Failure to follow instructions can result in unintentional damage or product damage.

SPECIFICATIONS RLM65/RLX65

Configuration: 2-way

Size: 170mm (6.5")

Minimum Input (RMS) : 40 W

Rated Power (RMS) : 80 W

Peak Power: 120W

Nominal Resistance (Ohm) : 4 Ω

Minimum Resistance (Ohm) : 3.2 Ω

Sensitivity (1W/M) : 88 dB(+/-3dB)

Frequency Range: 45-20 kHz (RLM65); 60-20kHz (RLX65)


Cone Material: Pressed Paper Fiber (Dampproof)

Suspension Material; Nitrile Butadiene Rubber

Voice Coil Diameter: 25.5 mm (1.0")

Coil Material: ASV

Magnet Material : Ferrite

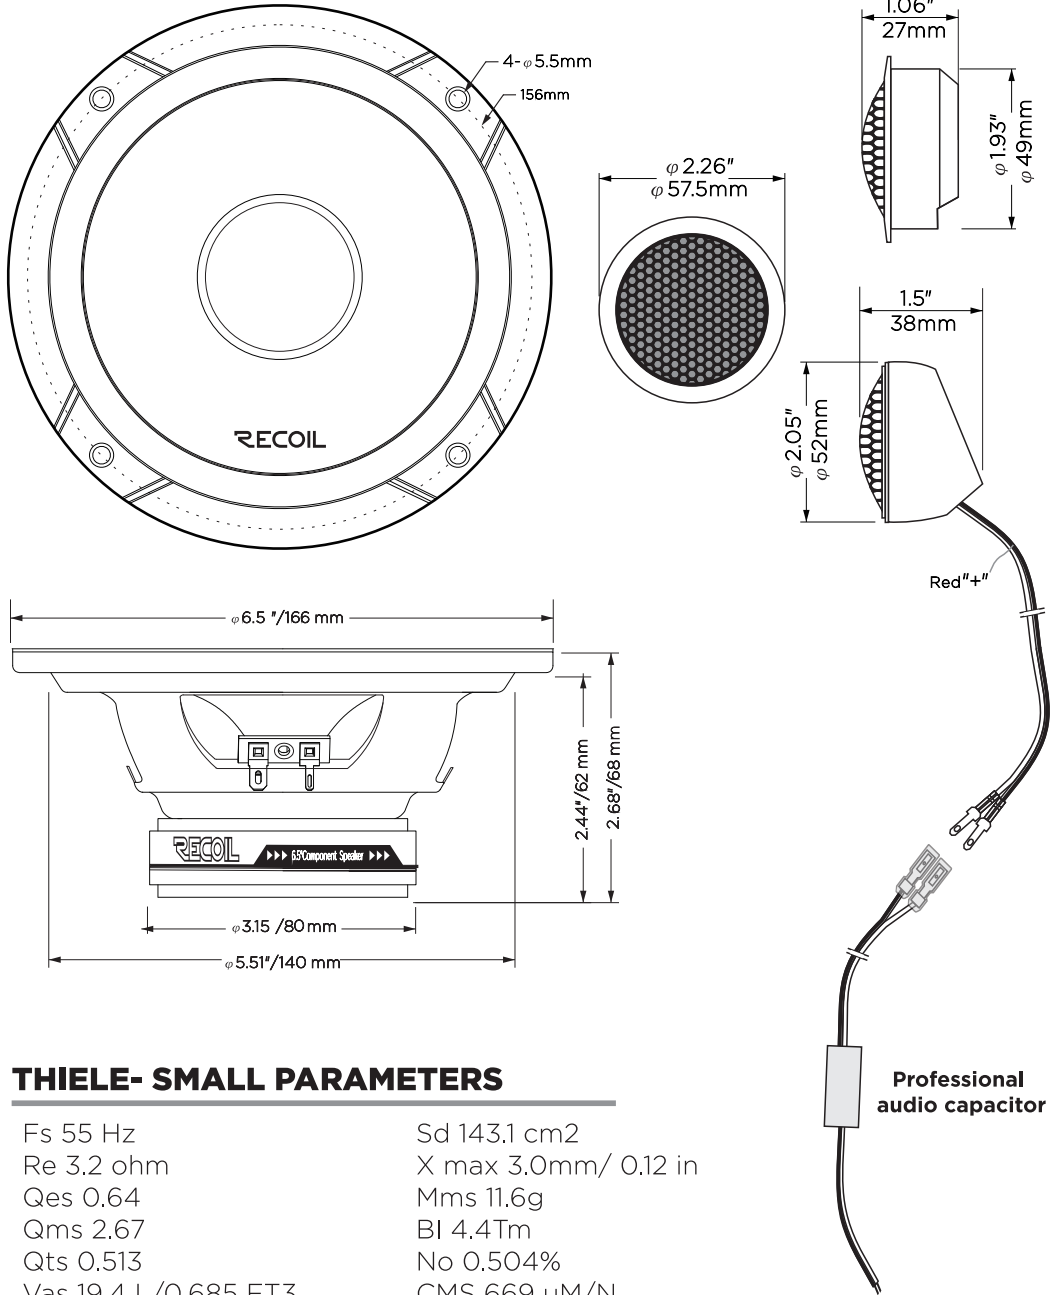

THIELE- SMALL PARAMETERS

Fs 55 Hz
 Re 3.2 ohm
 Qes 0.64
 Qms 2.67
 Qts 0.513
 Vas 19.4 L/0.685 FT³

Sd 143.1 cm²
 X max 3.0mm/ 0.12 in
 Mms 11.6g
 BI 4.4Tm
 No 0.504%
 CMS 669 μ m/N